


Engineered Truss Framing Detail

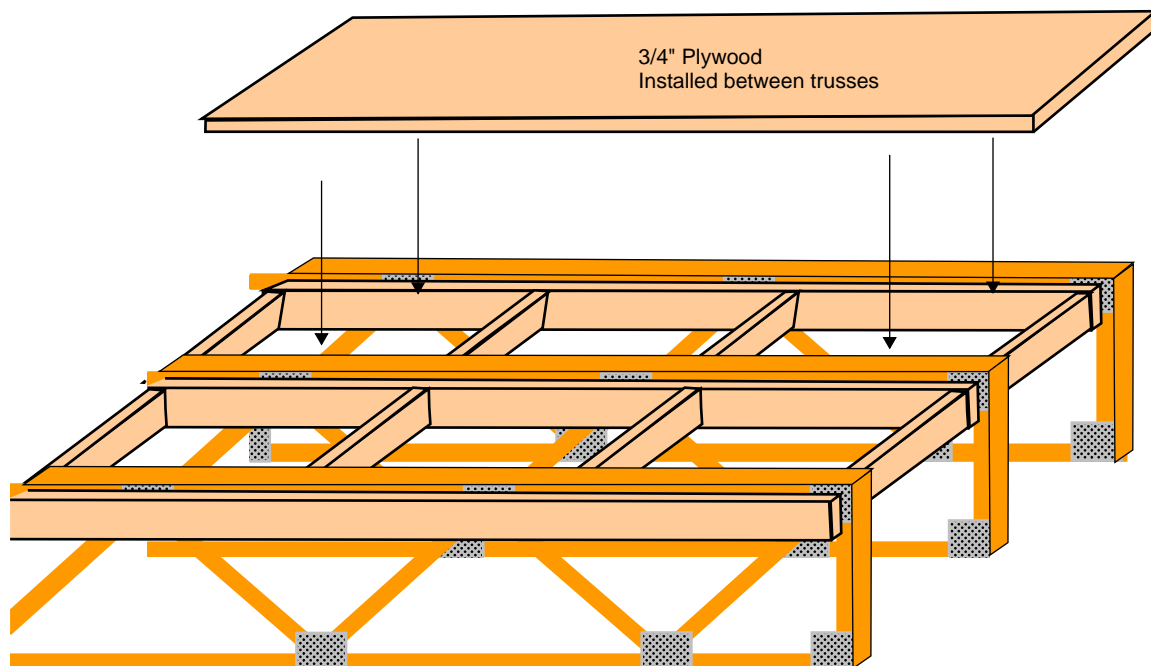

Install 2x4's to the side of engineered trusses, 3/4" down from the top of the truss. Provide 2x4 cross bracing on each end and every 16"-24". Cross bracing should also be provided under the existing sub-floor to eliminate deflection. Cut 3/4" plywood to fit between trusses and secure in place.